MODEL NAME **Afero Secure Hub**

AFERO MODEL NUMBER ASH-1

WAN RF TYPE (OPTIONAL)

Dual-band LTE

NUMBER OF WAN ANTENNAS (OPTIONAL)

WAN ANTENNA CONFIGURATION Internal

WI AN TYPE

802.11a/b/g/n 2×2 MIMO

WLAN RADIO FREQUENCIES 2.4 GHz and 5 GHz

NUMBER OF WLAN ANTENNAS

2 dual-band

WLAN ANTENNA CONFIGURATION

Internal

64-bit WEP, 128-bit WEP, WPA-PSK, WPA2-PSK

BLUETOOTH RADIO

Bluetooth® Smart Wireless Technology (4.1)

NUMBER OF BLUETOOTH ANTENNAS

BLUETOOTH ANTENNA CONFIGURATION Internal

SECURITY FEATURES

Cryptographic co-processor with

secure, hardware-based key storage

LED INDICATORS

SPEAKER

Piezoelectric

BUTTONS Reset button

LISER INPLITS

Barcode reader

Afero accessory expansion port

ACCESSORIES (OPTIONAL)

Ethernet adapter, backup battery

104W x 127H x 68D mm

WEIGHT (EARTH MSL) 275 g

AC input: 110V~240V (50~60Hz) DC output: 5V, 2.5A

OPERATING TEMPERATURE

0 to 40° C

STORAGE TEMPERATURE

-20 to 60° C

OPERATING HUMIDITY

10 to 80% non-condensing

STORAGE HUMIDITY

5 to 90% non-condensing

The **Afero Secure Hub**[™] is a standalone wireless gateway designed to support devices that demand continuous connectivity. The Afero Secure Hub connects to the Afero Cloud using WLAN, or optional cellular WAN LTE technology.

The Afero Secure Hub ensures secure and reliable communication between the Afero Cloud and up to 25 devices equipped with an Afero Secure Radio Module (ASR-1). It also leverages the same secure, hardware-based, cryptographic key storage as ASR-1.

CONSUMER ELECTRONICS

Appliances, lighting, home automation

INDUSTRIAL

Sensors, asset tracking and inventory management, equipment monitoring

MEDICAL

Real-time patient monitoring, integrated healthcare information

AUTOMOTIVE

Vehicle telematics, driver behavior, field service workflow management



3 LEDs indicate power and connectivity state.



The Afero Hub features a barcode reader to quickly onboard new connected products.

The Afero Secure Hub uses **Dynamic** Hub Technology[™], which allows multiple hubs to provide seamless coverage to devices.

Device onboarding is fast and secure with the hub's integrated barcode reader. Swipe the device's barcoded card to initiate secure communication to the Afero Cloud. Add Ethernet support or a backup battery through the expansion port located on the base.